Flip Bar - Layout

If you press the **INFO** button with the Flip Bar visible, you'll get more information about the show displayed as well as options for that show.

1. **GENRE**
   The type of show selected.
2. **INFO PAGES**
   Press NEXT or BACK on your remote to page through the show information.
3. **CLOCK**
   The current time.
4. **LOGO AND CHANNEL NUMBER**
   The logo and channel number of the selected show.
5. **PROGRAM SCHEDULE**
   The time the program begins and ends.
6. **COMING UP**
   Displays the next three shows coming up on the selected channel.
7. **ACTION MENU**
   The list of options available for the selected show.

Management

When you press **INFO** with a recorded program in focus, you'll get the following list of options in the action menu:

- Play/Start Over - Launches the program full screen from the beginning.
- Resume - This option only appears if you've watched a portion of the program. Launches the program full screen from the point you left off.
- See all times - Displays all of the times that particular show airs.
- Delete - Removes the program from Recorded TV.
- Recording options - Lets you access the recording options menu.
- Keep Until - Your KUDZU Media Player will automatically delete the oldest shows in your Recorded TV folder as you need the room for new recordings. Keep Until lets you set the program to be deleted at the point of your choosing.
- Lock - Prevents someone from watching the recorded program without a PIN.
- Record Series - you'll get this option if you only have a single episode recorded.

Settings

Settings provides robust Parental Controls, including the ability to lock shows by:

- TV Rating
- Movie Rating
- Channel

In addition, you can lock out individual shows, including recorded programs, from action menus for each show in the main menu. The system records scheduled shows that are blocked by parental controls, but you must enter the PIN before you can watch them.

Phone

Your Kudzu Media Gateway comes with Caller ID services. When you first begin using the Kudzu Media Gateway, on-screen call ID is turned on by default. When you press OK with the phone card settings selected, you'll be able to turn off both the Caller ID and the Call List features for each line. (May not be available in all areas)

ComSouth

ComSouth KUDZU
WHOLE HOME DVR/HIGH SPEED INTERNET/HOME PHONE

Quick Reference Guide

The Main Menu Layout

1. **TIME**
   With the current time, you'll know when your show begins.
2. **CURRENT CHANNEL**
   Displays the channel that is playing in Mini TV. If the program is recorded, an icon will display the current status - i.e., play or pause.
3. **MINI TV**
   Lets you keep watching your program while you browse.
4. **FOCUS**
   The current selection is in the focus area of the menu. When cards are in focus, they appear raised and highlighted.
5. **VERTICAL LIST**
   Contains all of the items in the current horizontal category.
6. **INFO PANEL**
   Depending on the item in focus, this area either provides more information about that item or a selection of choices for that item.
7. **CARD**
   Items in vertical lists are called cards.
8. **CATEGORY**
   Items in the horizontal band are called categories. When a category is in focus, the name of the category appears in the top of the focus area.

Action Menus

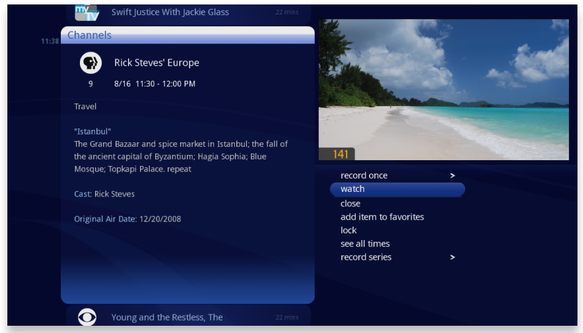

When you press **INFO** with an item in focus, you'll get a list of options for that item in an action menu.

Use the up and down arrow buttons to scroll through your action menu options. Action menus have a focus, just like the main menu. To select an option, bring it into focus and press **OK**.

To close the action menu, either select close or press the left arrow button.

Using Your Remote

Your remote will automatically allow you to control the menu.

Shortcut Buttons

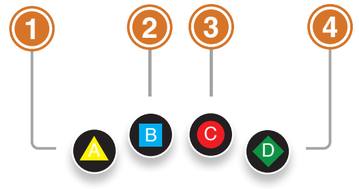

1. **DVR**
   Goes to the Recorded TV category.
2. **VOD**
   Feature not available
3. **GRID**
   Activates the traditional Grid Guide view of TV programming.
4. **LIVE TV**
   Goes to full-screen, live TV, regardless of what's currently in focus.

Menu Navigation

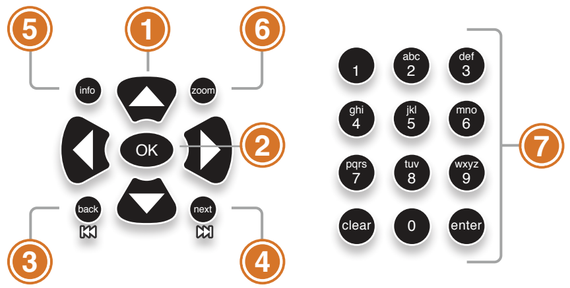

1. **ARROWS**
   Moves the horizontal or vertical bands one card backward or forward. Holding them down activates Turbo Mode and increases your browsing speed.
2. **OK**
   Begins playing the item in focus or executes an option in an action menu.
3. **BACK**
   Takes a vertical list displaying TV programming back to the previous 15 minutes. Also pages back through an info note and backs out of a second-level menu.
4. **NEXT**
   Takes a vertical list displaying TV programming forward to the next 15 minutes Also pages forward through an info note.
5. **INFO**
   Brings up an action menu of options related to the item in focus
6. **ZOOM**
   Alternates between full screen and the main menu. Also turns the SuperTicker on and off.
7. **NUMBER KEYS**
   Entering numbers will take you directly to the corresponding channel.

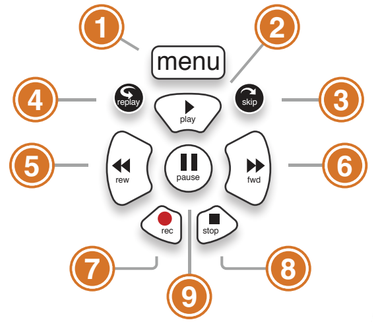

Player Controls

Control your recorded or live program with the following buttons:

1. **MENU**
   From wherever you are, MENU returns you one step at a time toward the top level of the main menu.
2. **PLAY**
   Begins playing the TV show or media file in focus. Also allows you to view the show at the point of fast-forwarding or rewinding.
3. **SKIP**
   Skips forward the number of seconds that you predefine in settings. Also takes a vertical list of TV programming forward in time 24 hours.
4. **REPLAY**
   Rewinds seven seconds. Also takes a vertical list of TV programming back in time 24 hours.
5. **REWIND**
   Press up to three times (for three speeds) to rewind the show.
6. **FAST-FORWARD**
   Press up to three times (for three speeds) to fast-forward.
7. **RECORD**
   Press RECORD while watching a show or with a show in focus to record.
8. **STOP**
   Exits out of a recorded show or stops a recording in progress if you're watching that show full screen.
9. **PAUSE**
   Pauses the show you are watching.